




# The Exerciser® SPEx-2

## Application Note for The Exerciser® and Sump or Sewage Pumps That Use an Integral Float Switch

### Connection Diagram - Original Configuration

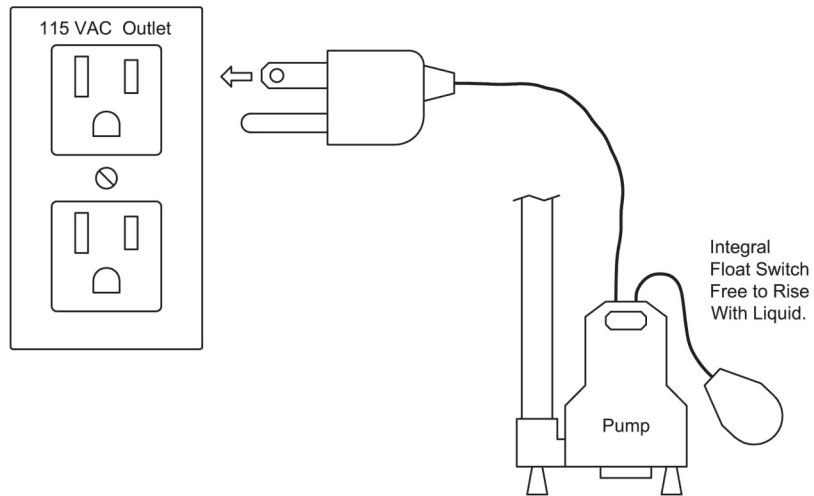

### Connection Diagram - With The Exerciser

The Exerciser must be plugged into a 115VAC Outlet, and the Pump plugged into the Exerciser as shown below. The original integral Float Switch must be tied in the run position, and the new Float Switch (Provided with the SPEx-2) must be installed and plugged into the Exerciser as shown below.

